




STEP 1 - Fully open the secateurs

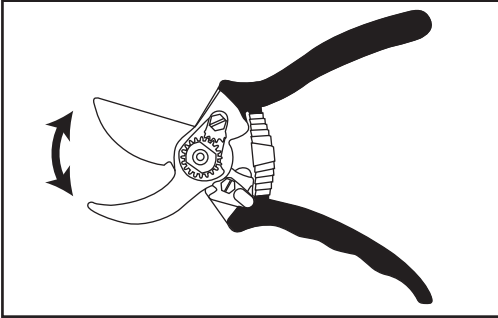


STEP 2 - Remove the spring

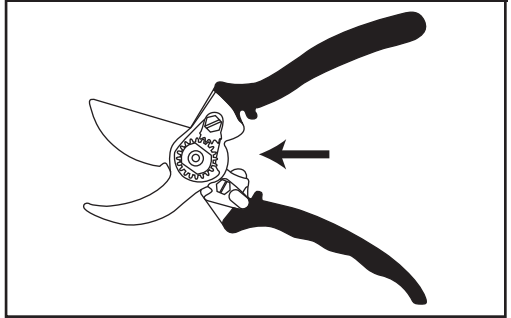


STEP 3 - Unscrew & remove tensioning lock

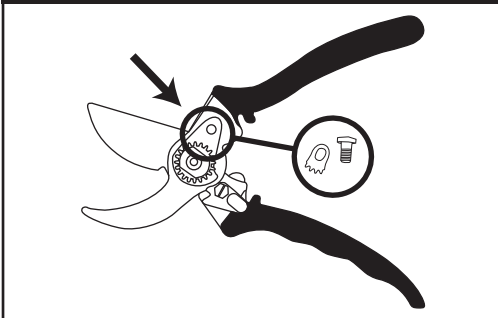


STEP 4 - Unscrew & remove tensioning wheel and backing plate

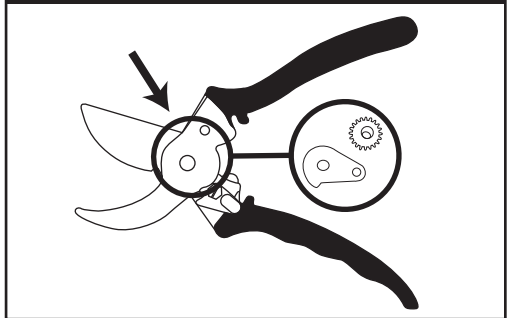


STEP 5 - Lift off handle to expose all of blade

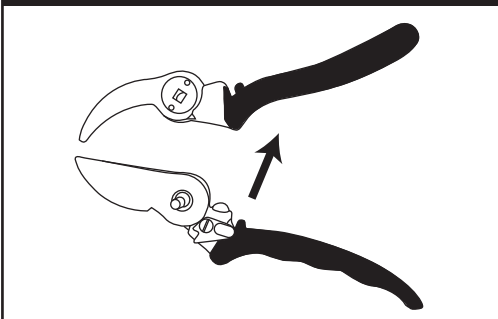


STEP 6 - Remove blade from its location pins

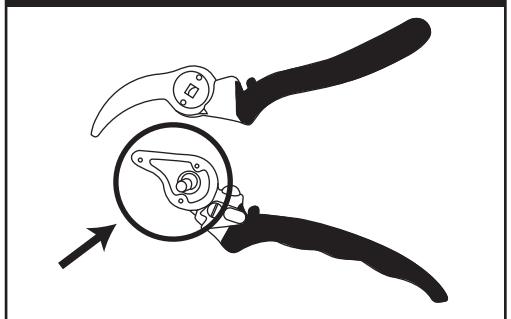


STEP 7 - Place new blade on location pins

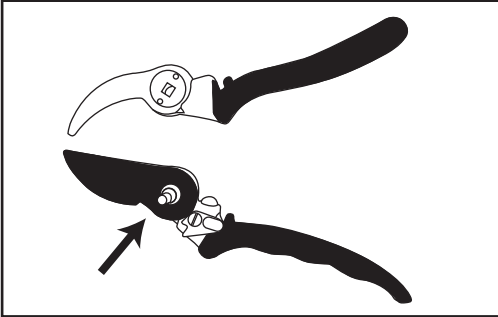


STEP 8 - Put handle back into position

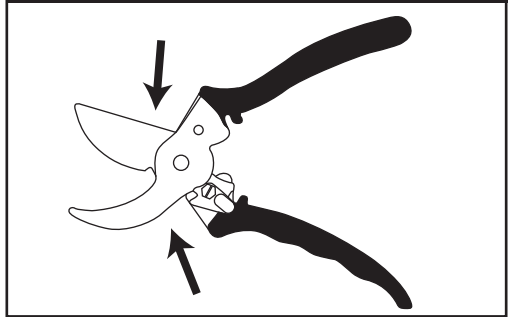

STEP 9 - Put tensioning wheel backing plate back in position, and screw tensioning wheel back into place

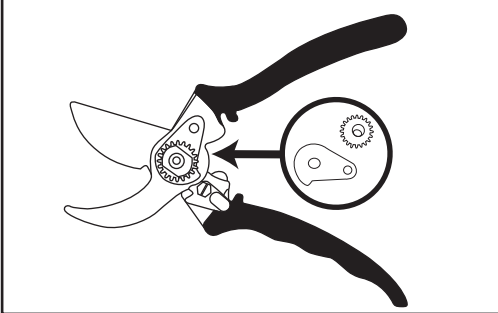

STEP 10 - Put tensioning lock back into place and tighten screw back up

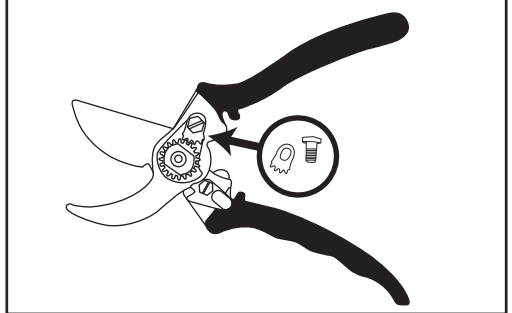

STEP 11 - Put spring back into place

